



**1877119 K-X Louvered 2 Twin Bed AN**

**1877096 K-X Louvered 2 Twin Bed CN**

**1877070 K-X Louvered 2 Twin Bed AW**

### **Parts and Hardware List**

A.	Headboard	1 pc
B.	Footboard	1 pc
C.	Side Rails	2 pcs
D.	Support Slats	12 pcs
E.	Phillips Head Screws	24 pcs
F.	Phillips Head Screwdriver	1 pc


\* Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.

\* This item should be assembled on a soft surface to prevent scratching the finish during assembly.

\* This item may require periodic tightening.

### **Assemble Bed**

1. **Attach Side Rails (C)** Insert the exposed hooks at the ends of Side Rails (C) into the pre-bored slots of the Headboard (A) and Footboard (B). Press the Side Rails (C) down onto the pins in Headboard (A) and Footboard (B) ensuring that the hooks are all the way down on the pins. See Illustration.
2. **Attach Support Slats (D)** Align the pre-drilled holes in the Support Slats (D) with the pre-drilled holes in the Side Rails (C). Secure both ends of each Support Slat (D) with Phillips Head Screws (E) using the Phillips Head Screwdriver (F). See Illustration.

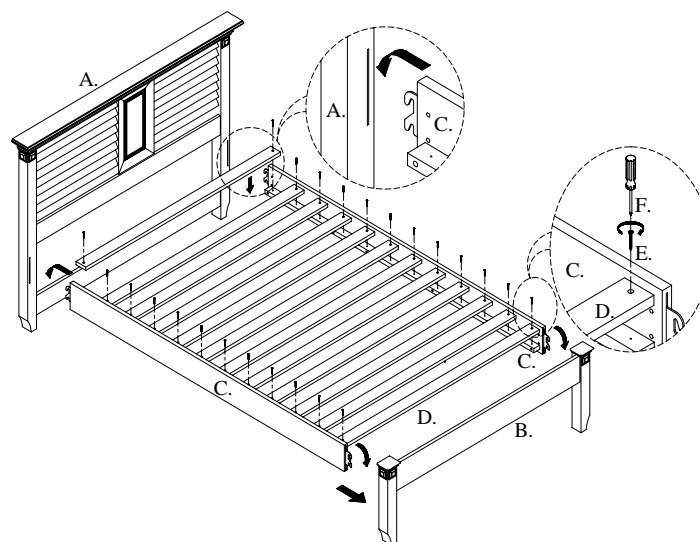

**Illustration**